DENON

Noise Canceling Headphones

AH-NC732

Owner's Manual
Bedienungsanleitung
Manuel de l'Utilisateur
Manuale delle istruzioni
Manual del usuario
Gebruiksaanwijzing
Bruksanvisning
Инструкция по эксплуатации
Instrukcja Obsługi
操作說明書
操作说明书

A

B

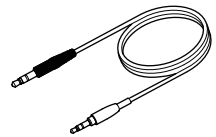

C

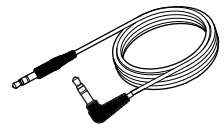

D



E



F



G

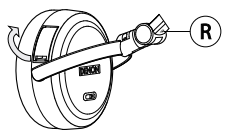

H

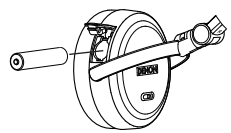

I

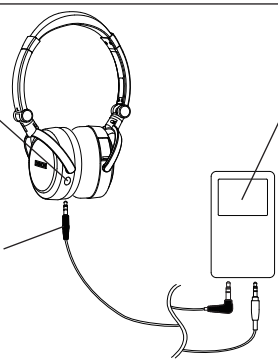

Jack / Buchse / Prise / Presa / Conector / Aansluiting / Uttag / Гнездо / Jack / 插口 / 插口

Black straight plug
Schwarzer, gerader Stecker
Prise mâle noire
Spina nera diritta
Plug recto negro
Zwarte rechte plug
Rak svart kontakt
Черный прямой штекер
Czarna prosta wtyczka
黑色直連插頭
黑色直连插头

Playback device
Wiedergabegerät
Appareil de lecture
Dispositivo di riproduzione
Dispositivo de reproducción
Afspeelapparaat
Uppspelningsenhet
Проигрывающее устройство
Urządzenie odtwarzające
播放設備
播放设备

Other plug / Anderer Stecker / Autre prise / Altra spina / Otro plug / Andere plug / Andra kontakt / Другой штекер / Druga wtyczka / 其他插頭 / 其他插头

J

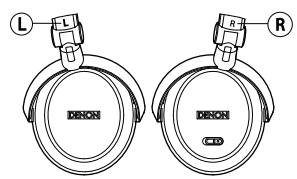

K

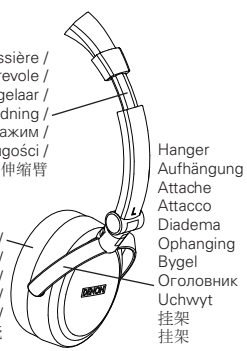

Slider / Stellbügel / Glissière / Elemento scorrevole / Deslizador / Schuifregelaar / Skjutanordning / Скользящий зажим / Regulator długości / 伸縮臂 / 伸缩臂

Hanger
Aufhängung
Attache
Attacco
Diadema
Ophanging
Bygel
Оголовник
Uchwyt
挂架
挂架

Housing / Ohrmuschel / Corps / Cuffia / Carcasa / Behuizing / Hörlursenhet / Корпус / Obudowa / 外殼 / 外壳

L

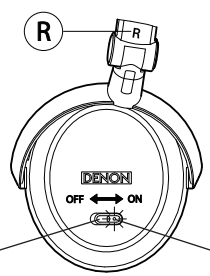

Power switch
Geräteschalter
Interrupteur principal
Interruttore di accensione
Interruptor de alimentación
Hoofdschakelaar
Huvudströmbrytare
Выключатель питания
Włącznik zasilania
電源開關
电源开关

Indicator
Anzeige
Témoin
Indicatore
Indicador
Indicator
Indikator
Индикатор
Dioda
指示燈
指示灯

M

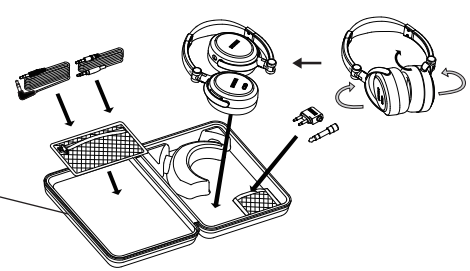

Carrying case
Tragebehälter
Malette de transport
Borsello da trasporto
Estuche de transporte
Draagkoffer
Bärväska
Футляр для переноски
Pudełko do przechowywania
便攜盒
便携盒

ENGLISH

Accessories

Check that the following parts are attached in addition to the main unit:

① Owner's Manual 1
② Carrying case (☞**A**) 1
③ Connecting cable (Cable length: Approx 0.7 m) (☞**B**) 1
④ Connecting cable (Cable length: Approx 1.5 m) (☞**C**) 1
⑤ Standard conversion plug (☞**D**) 1
⑥ Conversion plug for aircraft use (☞**E**) 1
⑦ R03/AAA battery (☞**F**) 1
⑧ Service station list 1

Declaration of conformity

We declare under our sole responsibility that this product, to which this declaration relates, is in conformity with the following standards:
EN55013.
Following the provisions of 2004/108/EC Directive. (For Europe model)

A note about recycling

This product's packaging materials are recyclable and can be reused. Please dispose of any materials in accordance with the local recycling regulations.
When discarding the unit, comply with local rules or regulations.
This product and the supplied accessories conform to the WEEE directive. (For Europe model)

Safety precautions

- Listening at high volumes that irritate your ears can have a negative influence on your hearing.
- Do not use headphones while driving a bicycle, motorcycle or automobile. Doing so could lead to accidents.
- When using headphones, for safety keep the volume to a level at which surrounding sounds can be heard.
- Do not put in water or dampen.
- Do not place heavy objects on, heat, or pull on the headphones. Doing so could damage or deform them.
- To prevent injury, be careful not to let your fingers get caught between the housing and hanger.

Caution on handling

- Be sure to hold the plug when unplugging the cable.
- Do not place undue stress on the cable, as this can result in wire disconnection or damage. Observe the following for correct usage.
  - Do not pull the cable unduly.
  - Do not fold the cable.
  - When connected to a portable device, do not leave the portable device hanging.
  - Do not wrap the cable around the portable device.
- If you leave a connected portable device hanging, it may become disconnected and fall. Take care as DENON does not guarantee portable devices.
- The ear pads may deteriorate after extended usage or storage.
- Always keep the headphones (particularly the ear pads) clean. If they are dirty, this may reduce their performance. Use a soft cloth to gently wipe off the dirt.
- Do not use benzene, thinners, or other organic solvents or insecticides on the main unit since they may cause a change in quality or color.
- The headphones have a structure by which the sound tends to leak out if the volume is too high.
  Be considerate of others.
- Do not expose to high temperatures.
  Do not expose to direct sunlight. Pay particular care with the inside of cars in hot weather. The components may be warped or damaged by high temperatures.

Features

- **Reduces external noise by as much as 99%** *
  When using in a moving vehicle, this product reduces the effect of noise from the vehicle, letting you comfortably enjoy the music.
- **Equipped with large 40 mm diameter driver unit and acoustic optimizer**
  Achieves high-grade sound playback owing to DENON's high sound quality technology and know-how.
- **Available with thin carrying case specially designed for the AH-NC732.**
  Uses folding construction, making it compact for carrying.

*: Noise energy ratio in the range reaching the ears when the AH-NC732 is mounted and when it is not mounted.
Noise within the audible range (20 ~ 20,000 Hz) is reduced an average of 99% thanks to the sound isolating effect of the newly developed ear pad and housing and the generation of a noise canceling signal.

Inserting the batteries

Leave the AH-NC732 power off.

1. Open the lid of the dry battery compartment on the R side housing. (☞**G**)
2. Insert the R03/AAA battery from the ⊖ side. (☞**H**)
3. Close the lid of the dry battery housing.
   Be sure to close firmly by pressing until the lid clicks into place.

Dry battery replacement period

When the battery runs out, the power switch indicator on the R side housing flashes.
Quickly replace with a new battery.

Dry battery duration

When using an alkaline dry battery, the duration is approximately 40 hours.

This varies with the conditions of use.

Using the AH-NC732

Preparations

1. Connect the black straight plug of the connecting cable to the jack on the L side housing of the unit. (☞**I**)
   - You can choose from two types of connecting cable: 0.7 m and 1.5 m.
2. The other plug on the connecting cable connects to the playback device. (☞**I**)
3. Be sure to wear the headphones correctly, with the R side at the right ear and L side at the left ear. (☞**J**)
   - The slider provides adjustment in 14 stages. Use in the position you like. (☞**K**)

- When connected to a device with stereo standard jack, use the included standard conversion plug.
- When listening to service music on an aircraft, use the included conversion plug for aircraft use.

NOTE:
- Do not pull the slider with unnecessarily force. Damage may result.
- You may not be able to use the included conversion plug for aircraft use, depending on the aircraft.
- You may not be able to use with some portable and other devices equipped with a digital amplifier.

Listening to audio

First minimize the volume of the playback device.

1. Turn on the power switch on the R side housing. (☞**L**)
   - The power switch indicator lights.
2. With the power on for the playback device you want, the device plays.

- With the AH-NC732 power switched off, you can use as normal headphones. In this case, the noise canceling function does not operate.
- You can use the noise canceling function alone by not connecting the connecting cable to the AH-NC732.

NOTE:
- If the indicator does not light or flashes when you switch the power on, the dry battery has run out. Quickly replace with a new battery.
- Be sure to turn the power off after use.

How to replace in the carrying case

1. Remove the connecting cable and plug from the AH-NC732.
2. Fold the AH-NC732 and place it in the carrying case. (☞**M**)
   - Place cable and plugs each in their own compartments. (☞**M**)
3. Close the carrying case and shut the fastener.

NOTE:
Insert the AH-NC732 into the form provided in the carrying case. Do not force the AH-NC732 into the case, or damage may result.

Troubleshooting

If a problem should arise, first check the following:

1. Is the set being operated as described in the owner's manual?

If this unit does not operate properly, check the items listed in the table below. Should the problem persist, there may be a malfunction.
In this case, disconnect the power immediately and contact your store of purchase.

Symptom	Cause	Countermeasure
No sound emitted.	• Connecting cable not connected to AH-NC732. Or connection is defective.	• Check that the plug is fully inserted.
	• Connecting cable not connected to playback device. Or connection is defective.	• Check that the plug is fully inserted.
	• Connected device does not operate.	• Turn on the power of the connected device, and play.
	• Connected device volume is low.	• Gradually increase the volume of the connected device.
Sound is distorted.	• Connected device volume is too high.	• Decrease the volume of the connected device.
	• The batteries are not inserted in the proper direction, as indicated by the polarity marks in the battery compartment.	• Insert the batteries in the proper direction, following the polarity marks in the battery compartment.
	• Batteries are worn.	• Replace with new batteries.
No noise canceling effect.	• Batteries are worn.	• Replace with new batteries.
	• AH-NC732 power is off.	• Turn the AH-NC732 power on.
Noise can be heard.	• Batteries are worn.	• Replace with new batteries.
	• Mobile phone or other electronic device is nearby.	• Move the electronic device away.

Specifications

❑ **Type:** Dynamic type
❑ **Drive units:** Ø 40 mm
❑ **Input impedance:** 40 Ω/ohms
❑ **Sensitivity:** 105 dB/mW
❑ **Maximum input:** 100 mW
❑ **Playback frequencies:** 5 ~ 28,000 Hz
❑ **Weight:** 146 g (not including cable)
❑ **Cable length:** 0.7 m / 1.5 m OFC cable
❑ **Plug:** Ø 3.5 mm gold-plated stereo mini plug

* For improvement purposes, specifications and design are subject to change without notice.